


BANNER

Set up instructions

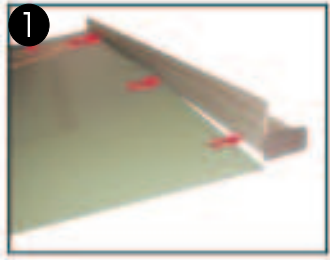

1 Slide in graphic into slot and clamp shut (if not already done)




2 Insert foot into rear of bottom clamp. Ensure nipple fits into hole.



3 Assemble 3 part aluminium pole. Insert black fitting into top clamp



4 Raise pole and slot bottom of pole into base

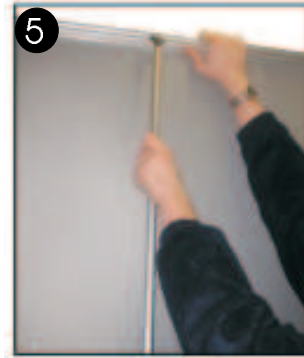

5 To take down twist top bar towards you and remove pole



Pole

Foot

Banner



Detail of foot in bottom clamp

EXPOLITE

With so many different substrates on the market any advice given on material is for guidance only. The compatibility of substrates with expolite hardware must be determined by the purchaser.